



Detail of the ridge


When setting the ridges and hips of roofs covered with Roman/Portuguese roof tiles, it should be used a strip of mortar to fix ridge tiles and under-ridge wedges.


When correcting ridges, the last top row of tiles should be cut creating an empty space of 2 cm between roof tiles allowing the air circulation, as indicated in the drawing.

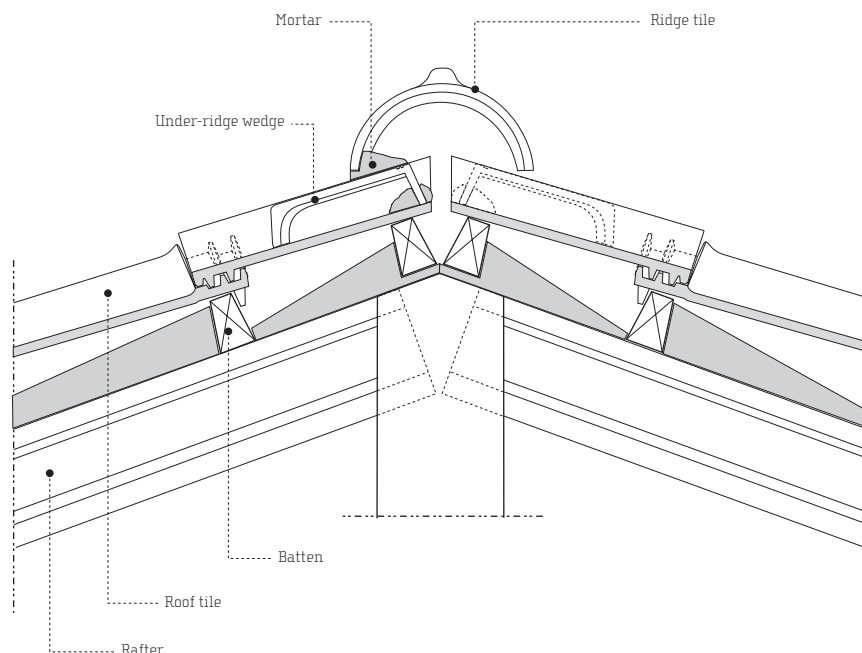

Laying the ridge

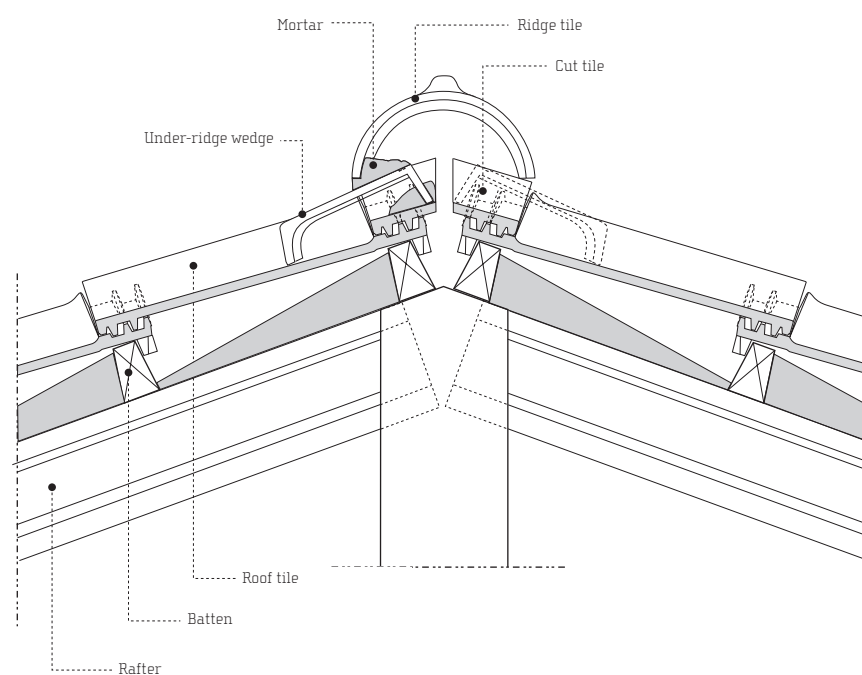Detail of the ridge with adjustment of the roof tile


Given the hips pitch with regard to the under-ridge wedges, the latter should be cut by the frieze existing to that end on its reverse. When roof tiles in place coincide with the length of the roof plane, the correction of the ridge should be done with a cut tile so that the ridge tile may totally cover the space created by the intersection of the two sloping roof planes.

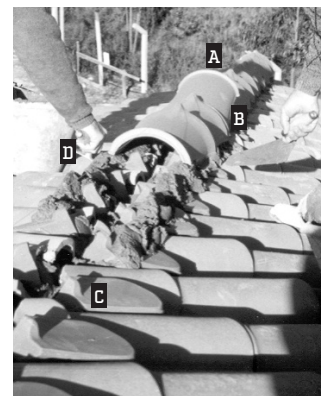

Laying the hip

- A** Ridge tile
- B** Mortar of the under-ridge wedge
- C** Under-ridge wedge
- D** Mortar of the ridge tile